



SETTING UP YOUR **OPTIPARTS** STANDARD OPTIMIST RIG

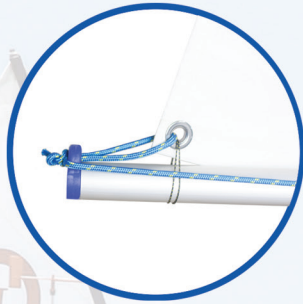

OUTHAULE,
1.20m, 4mm diameter.
Put a figure eight knot behind the boom outer end. Pass the outhaul through the clew ring in the sail back through the outer end and through the cleat.




THROAT,
Attach lacing lines with reef knots.

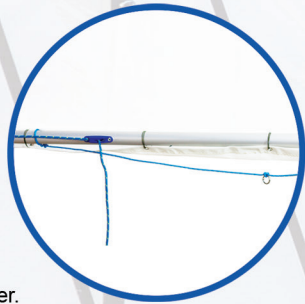

BRIDLE,
1.75m, 3mm diameter.
Bridle with stainless steel ring for mainsheet. Attach the bridle to the boom with a bowline knot. Attach the mainsheet block to the ring with a shackle.



HALYARD,
1.60m, 5mm diameter.
Attach to sprit with bowline knot.

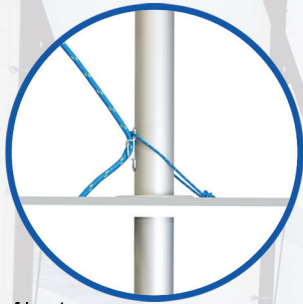

KICKER,
0,90m, 6mm diameter.

MAST LOCKING DEVICE,
0,4m, 3mm diameter.
Attach to eye on deck with reef knot. This line should be passed around the mast and over the kicker cleat while sailing.



TACK,
Attach lacing lines with reef knots.

PREVENTER,
0.40m, 3mm diameter.
Attach to the holes in the boom inner end with two figure eight knots.


www.optiparts.com

OPTIPARTS
MARINE EQUIPMENT




KNOTS INSTRUCTIONS


BOWLINE KNOT

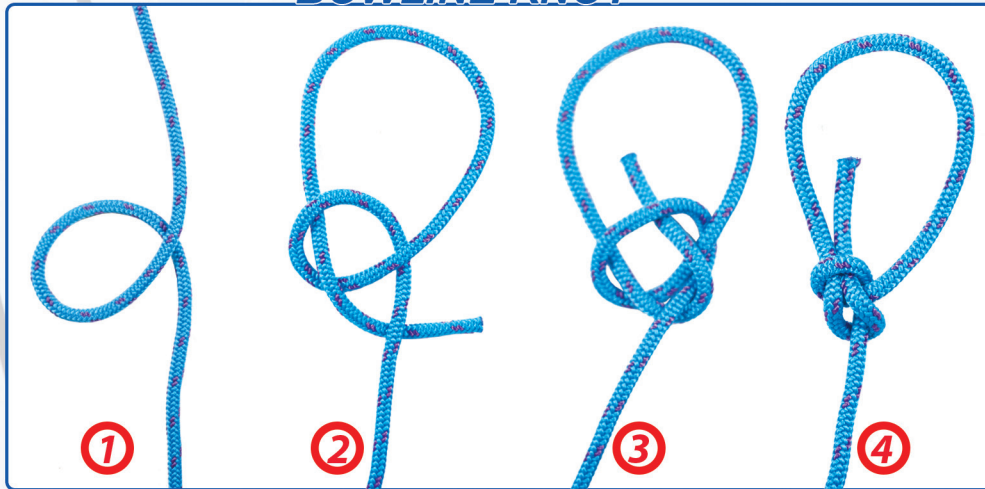

REEF KNOT

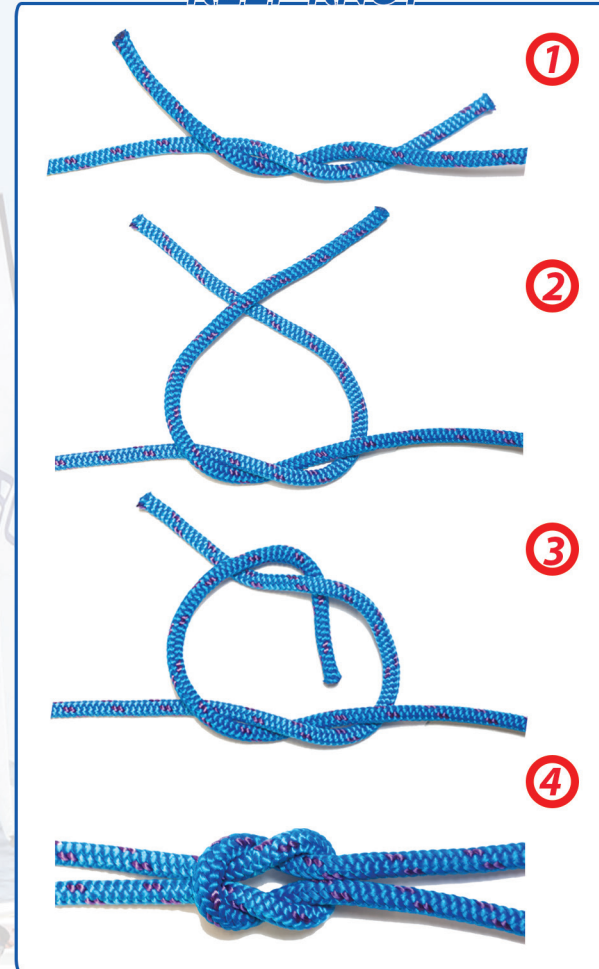

EIGHT KNOT

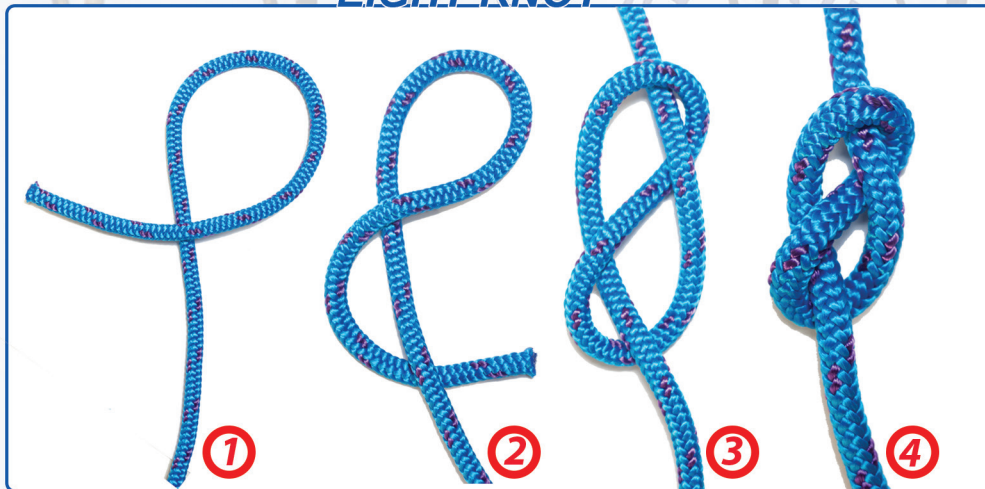

Instruction video: www.optiparts.com